



**INSTALLATION INSTRUCTIONS**  
**BODY ARMOR 4X4 CARGO BASKET PN 5124**  
**DESIGNED TO FIT BODY ARMOR ROOF RACK SYSTEMS**

**PARTS LIST:**


Qty	Description
1	Front section of cargo basket
1	Rear section of cargo basket
6	Pedestal mounting feet
2	6mm - 40mm - 1.25 bolt
6	6mm - 50mm - 1.25 bolt
6	8mm - 70mm - 1.25 bolt
14	6mm flat washers
8	6mm lock washers
8	6mm nuts
12	8mm flat washers
6	8mm lock washer
6	8mm nuts

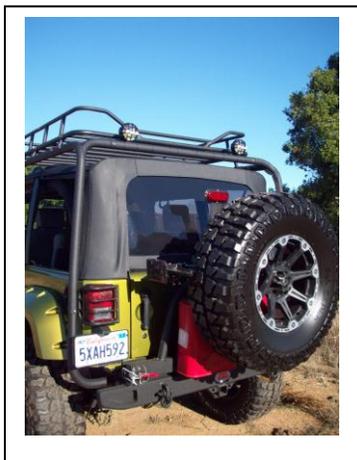

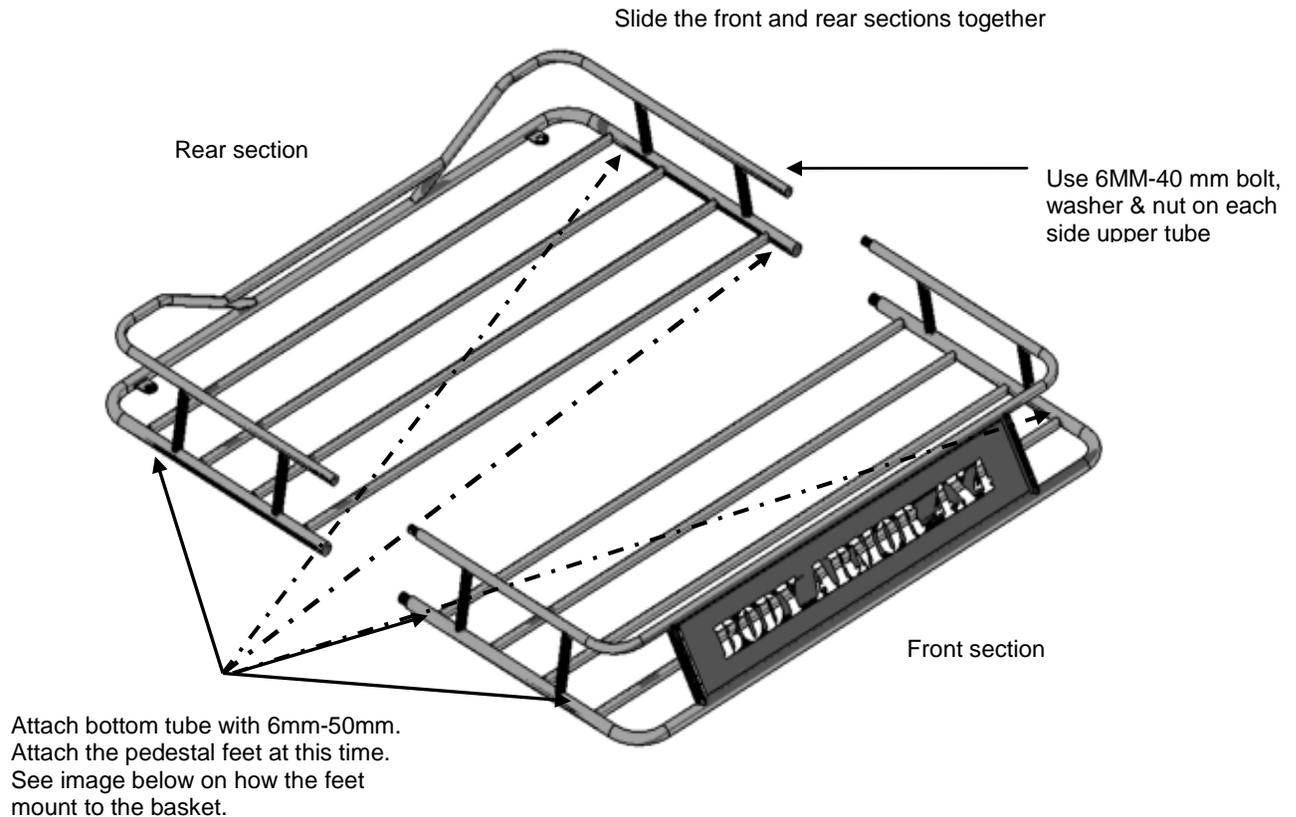

1. Join the front and rear sections of the basket. Use 6MM-40MM bolts on the upper joint.
2. Locate the 6 pedestal feet and place them at the mounting locations on the lower tube.
3. Attach each foot as noted below. Use 6mm-50mm bolt, washers, lock washers and nut. We recommend that the bolt head is to the outside. Do not tighten at this time as this will allow each foot to adjust to the base rack.
4. Carefully lift the basket and place it on the roof rack. Use a helper if needed.
5. Line up the basket so that each foot lines up with the mounting hole on the roof rack. The rear hole should be 4.5" up from the joint of the side tube and the rear upright use this location as your starting point.
6. Adjust the basket side to side to properly set the pedestal feet; this is to center the basket on the rack. Tighten the bolts on the basket once you centered the basket between the side rails.
7. Attach the basket to the base rack with the 6MM-50MM bolts at this time. Be sure to tighten and check the all of the bolts.
8. There are tabs at the rear of the basket. They can be used for either lights or CB antenna.

Note how the pedestal feet attach to the basket as well as the base rack.

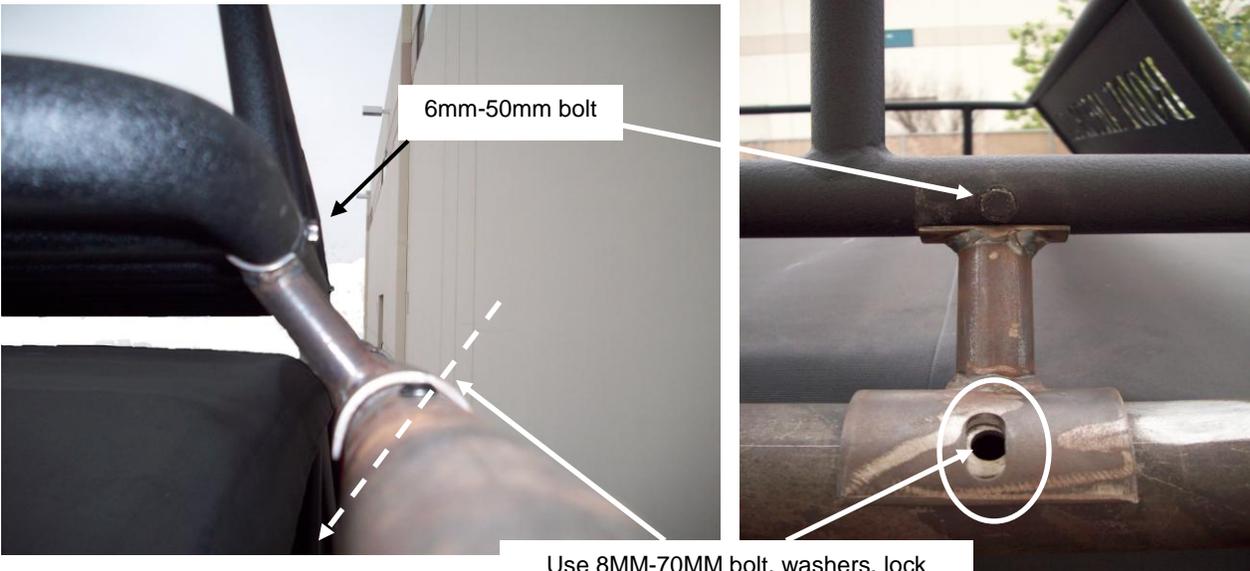

Make sure that the basket is centered between the roof rack side tubes

